


1. The Physical Tablet

1.1- The Physical Tablet & Hardware

The mount power cable is connected via USB, it runs into the back of the ELD box located generally on the top of the dash.



The back of the ELD has 4 USB ports around the outside. Your devices (tablet/camera) should already be plugged in to USB ports. Any of these can be used for charging, and may have rubber stoppers in them that must be removed before plugging a device in. The braided cable light in the middle of the ELD box should be green if it is powered on and properly connected to Wi-Fi.

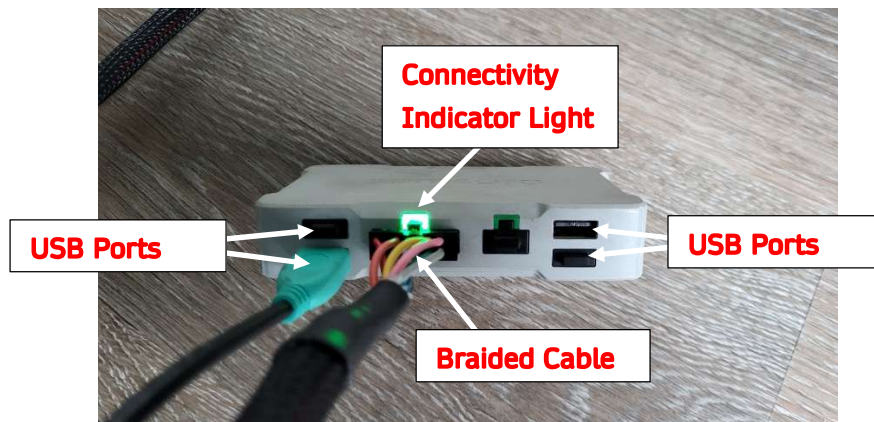


To mount and unmount the tablet from the mounting harness, push up on the tab. When placing the tablet back into the mount, it should snap into place, and the electrical contacts should fit snugly against each other.



1.2- Tablet Button Functions

Hold the Power button in to turn the tablet on. If the tablet is already on, holding the power button will open the power off/restart menu. The volume buttons are located beside each other above this. The green button is a quick launch, but should be disabled and not perform any function. It is not recommended to use the Stylus pen while driving as it is difficult to navigate the tablet with, and easy to drop.

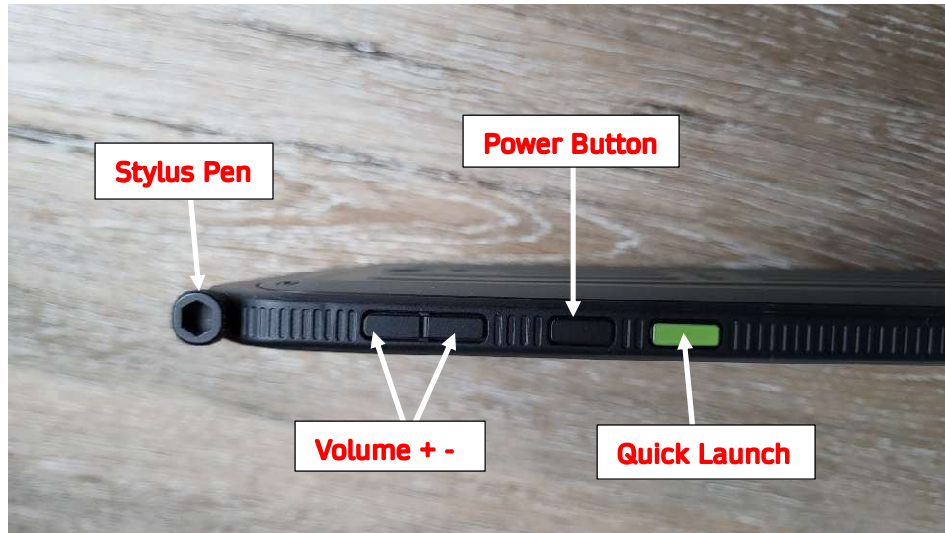

On the front screen of the tablet, there are 3 oval buttons. The back button will take you back one screen. The home button will return you to the home screen. The menu button should be disabled and not perform any function.

